


LED 6" Remodel Housing


HexaLED

- SHUT OFF ELECTRICAL SUPPLY AT SOURCE.**
- Determine the position where the housing will be installed on the ceiling.
- Make a hole in the ceiling of: **ø 7" (178 mm)**.
- Bring the electrical wiring to the junction box, as per applicable electrical codes.
- Connect the wires based on diagrams below. Please protect unused wires. Close the junction box.


- Unscrew slightly the screws holding the washer located on the heat sink in order to have access to the quick connect terminal.

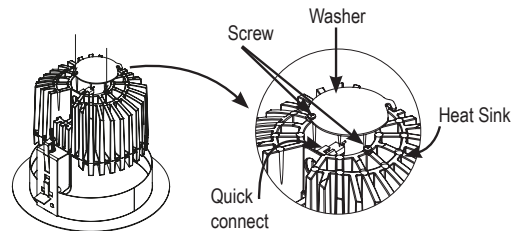


- Insert the connector located at the end of electrical flexible wire (BX) in the hole provided for this purpose in the heat sink. Connect the quick connect terminal.

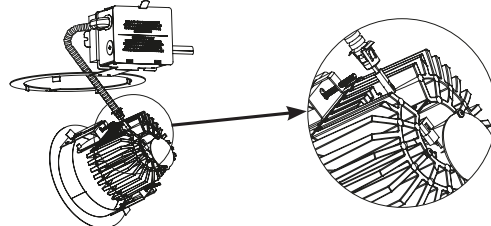


- Replace the washer located on top of the heat sink and tighten the screws (ref. step 10).
- Insert the trim and then push the hooks out of the housing through the side openings and fix everything with the locking screws.

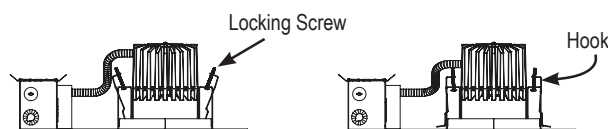




- Aim the mobile part of the trim and block it with the screws provided for this purpose.

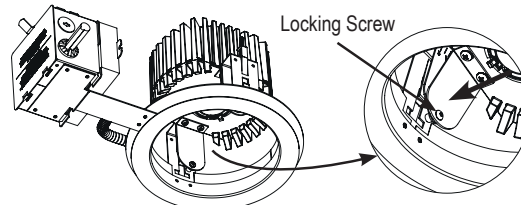



- Reinstall the center of the trim previously removed in step 9 by aligning the reflector opening with the locking tab, in the white plastic connector. Then turn 1/3 of a turn clockwise to lock.

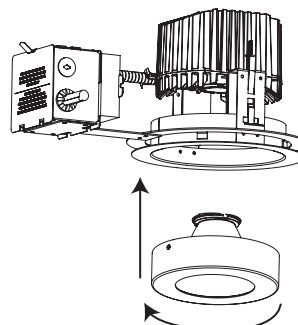


Certified cULus for installation in damp locations.

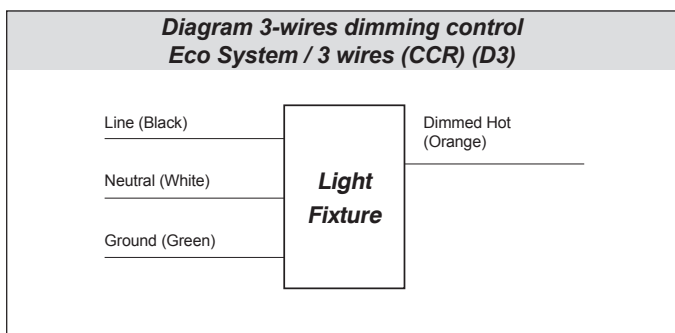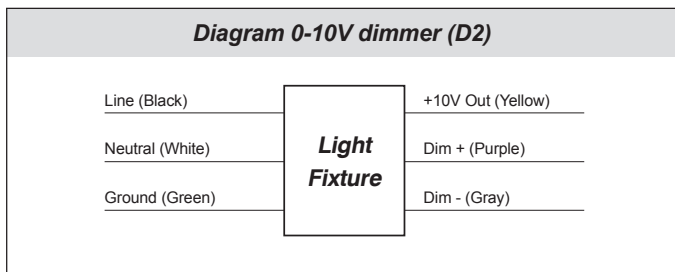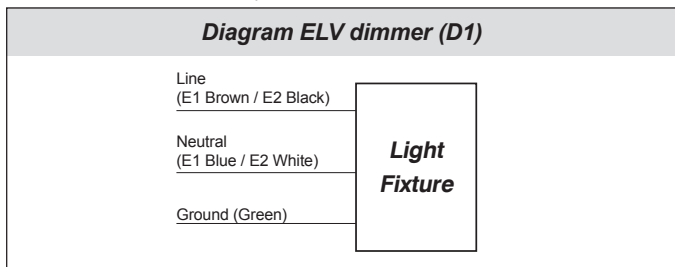

- Fold the two rounded parts of the housing to the inside.
- Insert the housing into the ceiling opening and open the rounded parts until it comes to rest on the edges of the hole.

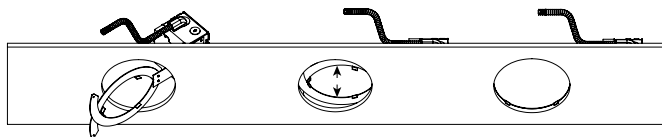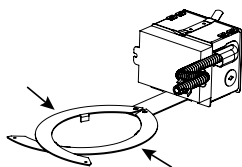

- Remove the adjustable center by turning it counterclockwise 1/3 of a turn.

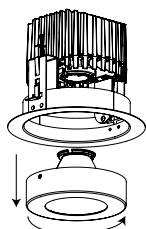

Please keep these instructions for future reference.

WARNING
The use of other company's (non-Contraste) products or components (e. g. trims) in conjunction with Contrast Lighting M.L. Inc. products may not be covered by UL approvals and could be hazardous. Such use automatically voids all Contrast Lighting M.L. Inc. warranty and responsibility of these products.

WARNING: SHOCK AND FIRE HAZARD

- Consult a qualified electrician before installing.
- NON-IC Housing. All parts of housing must be at least 3" (76 mm) from any insulation materials.

WARRANTY: CONTRAST LIGHTING M. L. INC. guarantees the components against manufacturing defects for a period of one (1) year, under normal use with proof of purchase. The obligation of the manufacturer consists in the cost of the components and does not cover the cost of labor and transport for replacement. For all claims, please contact your local supplier. See our Web site for additional warranty details. Note: 5 year warranty on driver and LED module.